


DAVIS STATION

STATION AREA MAP


Produced by the Australian
Antarctic Data Centre,
September 2000

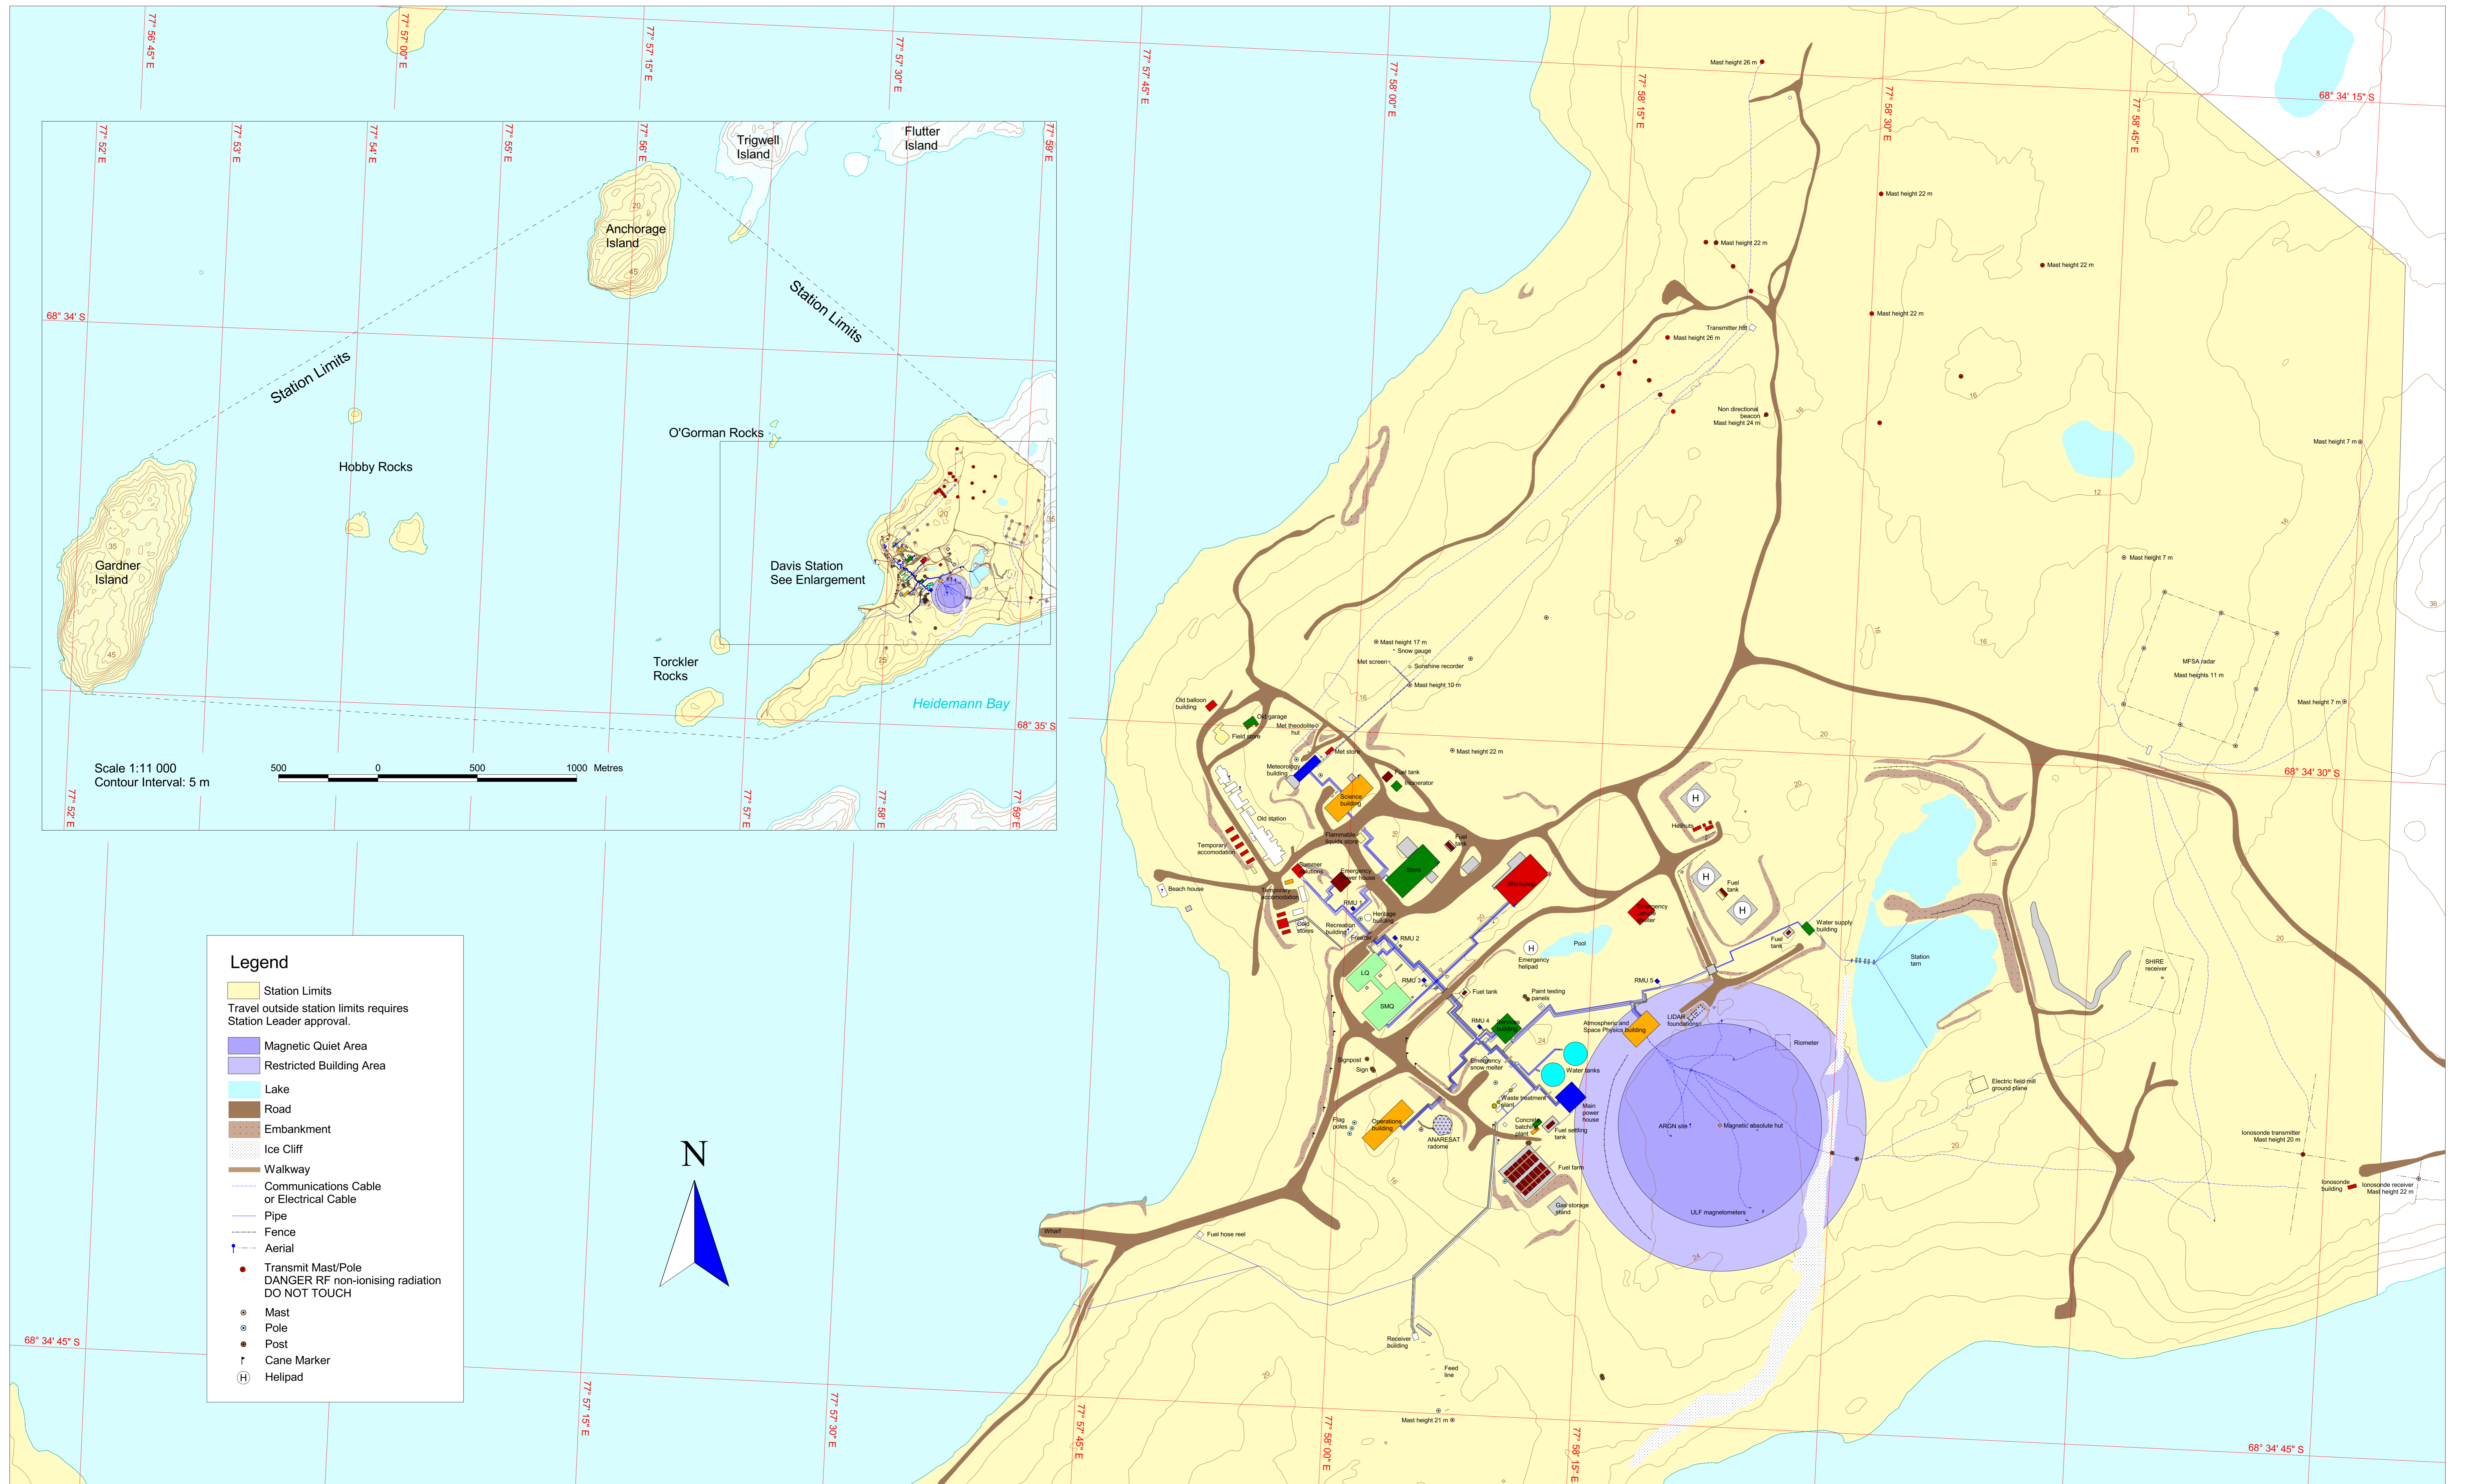

Scale 1:11 000
Contour Interval: 5 m

Legend

- Station Limits
- Travel outside station limits requires Station Leader approval.
- Magnetic Quiet Area
- Restricted Building Area
- Lake
- Road
- Embankment
- Ice Cliff
- Walkway
- Communications Cable or Electrical Cable
- Pipe
- Fence
- Aerial
- Transmit Mast/Pole
DANGER RF non-ionising radiation
DO NOT TOUCH
- Mast
- Pole
- Post
- Cane Marker
- Helipad

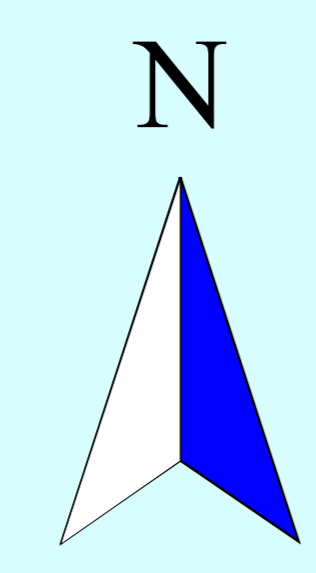

50 0 50 100 150 200 250 300 Metres

Scale 1:1500

Contour Interval: 4 m

Horizontal Datum: WGS84
Vertical Datum: Mean Sea Level
Projection: UTM Zone 43

Please email comments/corrections to
gis@antdiv.gov.au